



# Fan with Speed Controller

## CONNECT WIRING DIAGRAM

For model PC80X,PC110X,PC150


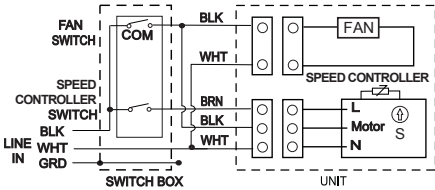


For model PCRL80,PCRL80F

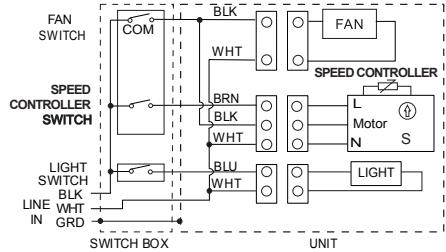

## OPERATION

Use a 2 function wall control. See “Connect Wiring” for details.  
Set the motor speed according to diagram as you need.

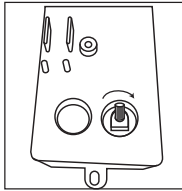
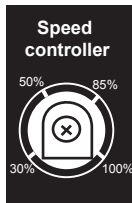


Max airflow is HVI Certified performance based on HVI Procedures 915, 916, and 920.

Other airflow reference performance based on HVI Procedures 915, 916, and 920.

## ASSEMBLY INSTRUCTIONS

1. Remove the Grille Assembly from the fan.
2. Put power box in the place showed right, fixed it with screws, and insert the plug from the box into the suitable wire panel. Connect electrical wiring refer to “CONNECT WIRING DIAGRAM” .
3. Install Grille Assembly to the fan.

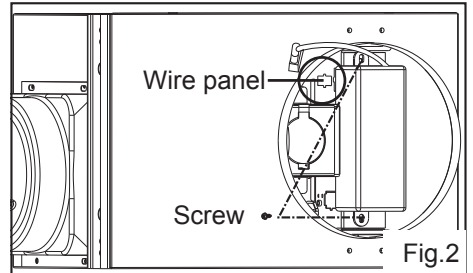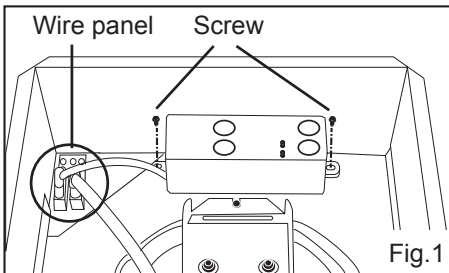

For model PC80X,PC110X,PC150

For model PCRL80,PCRL80F